



# AIR VENT VALVES AND SAFETY VALVES

## 362 Automatic air-vent valve

Available with NPT thread in the sizes 1/2" - 3/4" - 1"



SIZE	PRESSURE	CODE	PACKING
3/8"	10bar/145psi	3620038	10/120
1/2"	10bar/145psi	3620012	10/120
3/4"	10bar/145psi	3620034	10/100
1"	10bar/145psi	3620100	10/100

### CERTIFICATIONS



### TECHNICAL SPECIFICATIONS

Body in nickel-plated brass.


Float in polyethylenic resin.

Maximum working temperature: 110°C.

Maximum discharge pressure: 6 bar.

Threads: ISO 228 (equivalent to DIN EN ISO 228 and BS EN ISO 228).

### OVERALL DIMENSIONS

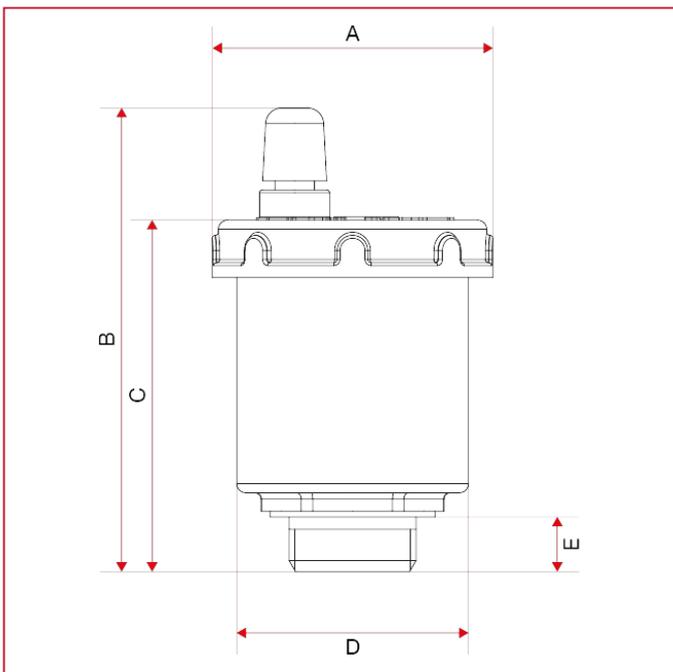



## AIR VENT VALVES AND SAFETY VALVES

	3/8"	1/2"	3/4"	1"
A	46	46	50	50
B	75,5	76,5	100	100
C	57	58	85	85
D	38	38	42	42
E	8	9	10	12
Kg/cm2 bar	10	10	10	10
LBS - psi	145	145	145	145



## AIR VENT VALVES AND SAFETY VALVES

### OPERATION AND INSTALLATION:

The automatic air vent valves are installed in order to remove the air that accumulates in heating and air conditioning systems. Thanks to their functioning, without need of manual operation, they allow to avoid for certain and permanently harmful phenomena that could compromise the life and the performance of any systems. Especially, it is possible to limit the negative effect of galvanic corrosion (due to extreme presence of oxygen inside the piping) and cavitation. Moreover, these valves allow to optimize the heating and cooling power of each system, since they avoid the formation of air pockets inside radiators and fan-coil units.

Such valves have to be installed in vertical position only, on top of each systems and, generally, where it is the evidence of air pockets' formation (distribution manifolds, riser pipes, etc.)

The air flow of these valves raises in accordance to the working pressure of a system, up to reach a maximum figure when the pressure raises up to 6 bar.

Here below there is the flow rate chart of these valves, when the system is being filled: as it is possible to read, the chart includes a maximum working pressure of 6 bar, since this figure is higher than an usual working pressure in heating and air-conditioning system (generally they work till 3 bar).

